





Grid Sensor (required)
This can be wired to the **eddi** or used with the **harvi** if it's difficult to run the cable back to the **eddi**

harvi
Harvests power from the sensor and transmits the import/export information to the load controlling devices - Wiring or batteries not required!

Optional wireless sensor

Generation Sensor (optional)
A second sensor can be fitted to monitor generation. This can be wired to the **eddi** or used with the **harvi**

Wired sensor not required if using harvi

The fuse rating should be 3A

RS485 Port (Controller Comms)



